




ADB TV Box Guide

Problem	Resolution
<p>ADB Box</p> <p>TV Not working?</p>	<p style="text-align: center;">3721wn</p>  <p style="text-align: center;">Power on-off button Power on indicator light (green)</p> <p>Above is the 3721wn set top box (without recorder). Use the remote power button to turn the TV on or off. Use the above button to turn the set top box on or off if desired.</p> <p style="text-align: center;">5721wnx</p>  <p style="text-align: center;">Power on indicator light (green) Power on-off button</p> <p>Above is the 5721wnx set top box with recorder. Use the remote power button to turn the TV on or off. Use the above button to turn the set top box on or off if desired.</p> <p>Power On? Confirm that the power light is green on the front of your ADB set top box (box with clock on the front). If it is red push the “STB” button and then the Power button on the ADB remote. The red light means that the set top box is turned off; the green light indicates it is on.</p>
<p>No Picture or Sound?</p>	<p>If your TV loses sound, picture, or freezes press the “Reset” button on the front of the set top box to the left of the clock. If you have a DVR (Digital Video Recorder), unplug the power (black cord) from the back for a few seconds and then plug it back in. The DVR box does not have a reset button on the front. This will reboot the box and will allow it to reload all settings. This process can take three or four minutes and when complete your TV will come back on to Channel 1. At this point you can go back to what you were watching.</p> <p>-If your TV is on the wrong Input or Channel, you may not have picture or sound. Should this happen, check to make sure your TV is on channel 3 if hooked up with a coax cable. You can use your regular TV remote or press the “TV” button on the ADB remote and type 03 on the keypad to get the TV back on Channel 3. This also happens when your TV is on the wrong Input for A/V inputs. To check the inputs you can use your regular TV remote or press the “TV” button on the ADB remote, and at the bottom of the ADB remote on the left side press the “TV/Video Input” button. This button will switch between inputs on your TV. Once you are on the correct Input your picture and sound should return. After your TV is back on the correct channel or Input, press the “STB button” to put the set top box back in control.</p>

<p>ADB</p>		<p>Power button and device setup buttons. Use the device buttons to select and control devices other than the TV.</p> <hr/> <p>Controls for playback of previously recorded programs if using the ADB 5721wnx digital recorder set top box.</p> <hr/> <p>Cursor keys for moving the cursor through the Minerva interface. Separate buttons for entering the program guide (guide), settings menu (menu), or information (info) on the current selection, and the exit button (exit) for leaving the current selection or menu.</p> <hr/> <p>These buttons are used with the TV settings in the SETTINGS menu.</p> <hr/> <p>Volume up (+) and down (-) control and channel up and down control by single channels. If viewing the guide, up and down by five channels. Also, the sound mute button (mute) and the last channel viewed button (last).</p> <hr/> <p>The numeric keypad for directly selecting a channel for viewing. The channel number will be displayed in the upper right of the screen for a few seconds after pressing the OK button.</p>
-------------------	--	---

For Information on Programming the Remote see the Guide Section on the website.

Connect the Set Top Box to your TV using one of the options below.



Good - Coaxial Cable

Connect one end of the coaxial cable to RF Out on the STB and the other to the RF IN on your TV (consult your TV manual). Your TV will need to be tuned to channel 3 in order to view programming. This is a Non HD connection.



Note: Arrow to Arrow. Arrow on the cable connector that must match up to the Arrow on the box. Make sure flat spot lines up. **Important:** If not matched up correctly the pins bend/break easily and the box it will not work.

Better - Analog AV cable



Composite Non-HD Video/Audio

yellow=**video**

white=**left audio**

black (black plugs into red audio on tv) =**right audio**



Component HD Video/Audio

red, blue, green=**video**

white (white to white on TV) =**left audio**

black (black plugs into red audio on tv) =**right audio**

Connect the specialized cable end to the AV output of the STB and the other ends to your TV using either composite in or component in on your TV. This will require that your TV to be set to a video input of Video or COMP in order to view programming (consult your TV manual).



Best - HDMI Cable

Digital Video and audio HD delivery. Connect one end of the HDMI cable to the HDMI port on the STB and the other to your TV. This will require that your TV to be set to a video input of HDMI in order to view programming (consult your TV manual).